



Description

The stake extractor is used instead of the standard cross-pin for removing stakes from the ground. This 'soldier friendly' device minimizes the effort to remove stakes in hard or swamp soils. This stake extractor is not compatible with composite stakes.

Reference

F3435-12782+F3435-63995

Technical characteristics

Reference	12782+63995
Dimensions (mm)	347 x 200 x 149 (plate) 850 x Ø35 (handle)
Weight (kg)	5.90

Operation

1. Install the stake extractor - the stake extractor plate must be aligned with the stake coupler
2. Insert the stake extractor handle
3. Remove the stake by pulling / pushing on the handle.



Installation of the stake extractor



Driving the stake out